


GE SECURITY CONCORD 4 QUICK GUIDE

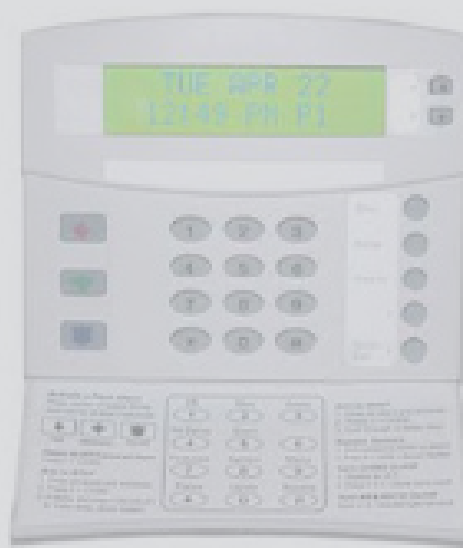

3D Security
Unique Solutions for Unique Customers

Battery

- The Concord 4 operates on a [UB 1270 battery](#).
- Loss of AC power and use of backup battery power is indicated by **NO AC**.
- A low battery condition is indicated by **BAT**.
- For instructions on replacing your battery, please visit our [Battery Replacement Page](#).

Bypassing Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed. There are two ways to bypass a zone: **directly and indirectly**.

- To **bypass a zone directly**, first arm your system as normal.
- Then, press [# Bypass] + enter your [security code].
- The display will read "BYPASS SENSOR" _ _ " or "ENTER SNSR _ _".
- Enter the desired sensor number.
- The display will confirm with 'BYPASSED ZONES _ _' or "SENSOR _ _ BYPASS".
- Continue to bypass more zones. If no more zones are desired, walk away, the system is armed.

- To **unbypass** a zone, repeat the direct bypass process or close the bypassed doors/windows and arm your system.

- To **bypass a zone indirectly**, leave the desired doors/windows open and arm your system normally.
- The display will read "PRO-TEST". This is because sensors have been left open.
- When the display reads "PRO-TEST", press [# Bypass]. The display will read "BYPASSES ZONES _ _" or "SENSOR _ _ BYPASSED".
- The system will sound arming level beeps to indicate that the system is armed and the open sensors (doors./window) have been successfully bypassed.
- The system is now armed with zones bypassed.

- To **unbypass a zone**, close the bypassed zones and arm your system normally.

Change Time and Date

To change the system **date**:

- Press [9] + [Master code] + [0] + [2] + [1].
- Enter the current date as 6-digits, i.e., 082314 for August 23, 2014, then press [#].
- Press [*] + [0] + [0] + [#] to exit.

To change the system **time**:

- Press [9] + [Master code] + [0] + [2] + [0].
- Enter the current time in 24-hour format, i.e., 1630 for 4:30pm, then press [#].
- Press [*] + [0] + [0] + [#] to exit.

Chimes and Beeps

When your system is in chime mode, a chime alert will sound three tones whenever a protected door/window is opened.

- To turn chime mode on and off, press [7] + [1].

Reset

- To clear the display after an alarm event, enter the sequence [1] + [security code] twice or enter [1] + [security code] + [*].

Security Codes

You can program up to 230 users, each with their own level of security.

- To **add a new user**, press [9] + [Master code] + [0] + [3] + [0] + [desired user number, i.e., 27 for user 27].
- Enter the desired user 4-digit code + [#].
- Press [*] + [0] + [0] + [#] to exit the menu.

- To **delete** a user, press [9] + [Master code] + [0] + [3] + [0].
- Enter the user number you wish to delete + [0] + [Master code] + [#].
- Press [*] + [0] + [0] + [#] to exit the menu.

New users can be assigned attributes, which define what actions users can and cannot perform. For a complete list of user attributes, please see the [Concord 4 system manual](#).

Trouble Conditions

Trouble conditions are issues that require your attention and are indicated by rapid beeps sounding every minute until the Trouble Condition is corrected.

- To **silence** the Trouble Condition beeping, press [* Status].

- For a list of possible Trouble Conditions, please see the [Concord 4 system manual](#).

Volume

You can adjust the system status voice volume level at which system status messages are announced.

- To **adjust** the system status voice volume, press [9] + [Master code] + [0] + [4] + [3].
- Select a volume level, where 1 is the lowest and 7 is the highest, then press [#].
- Press [*] + [0] + [0] + [#] to exit the menu.